




# T-FRAME CEILING

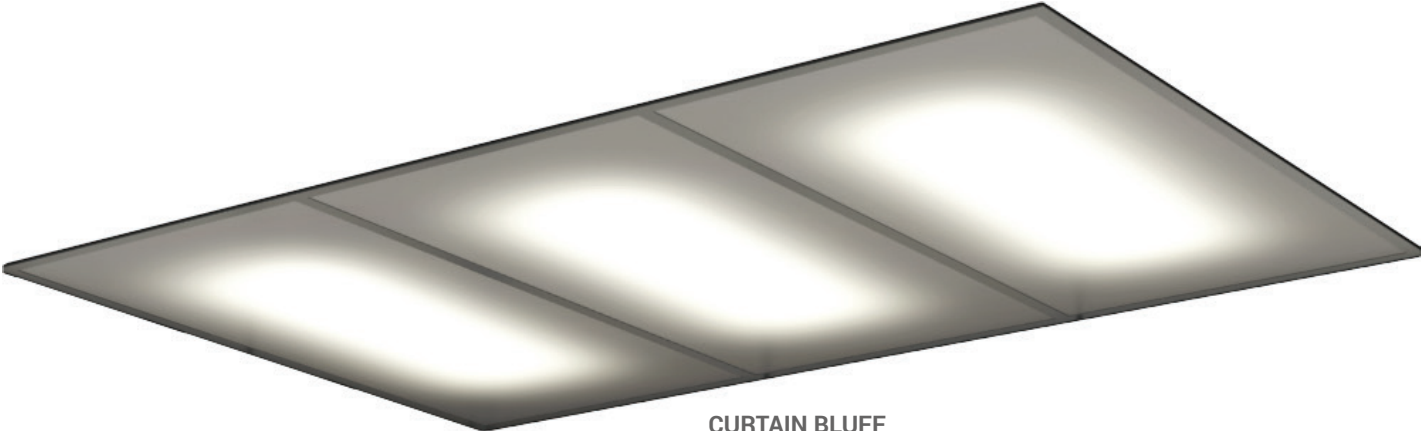

CURTAIN BLUFF

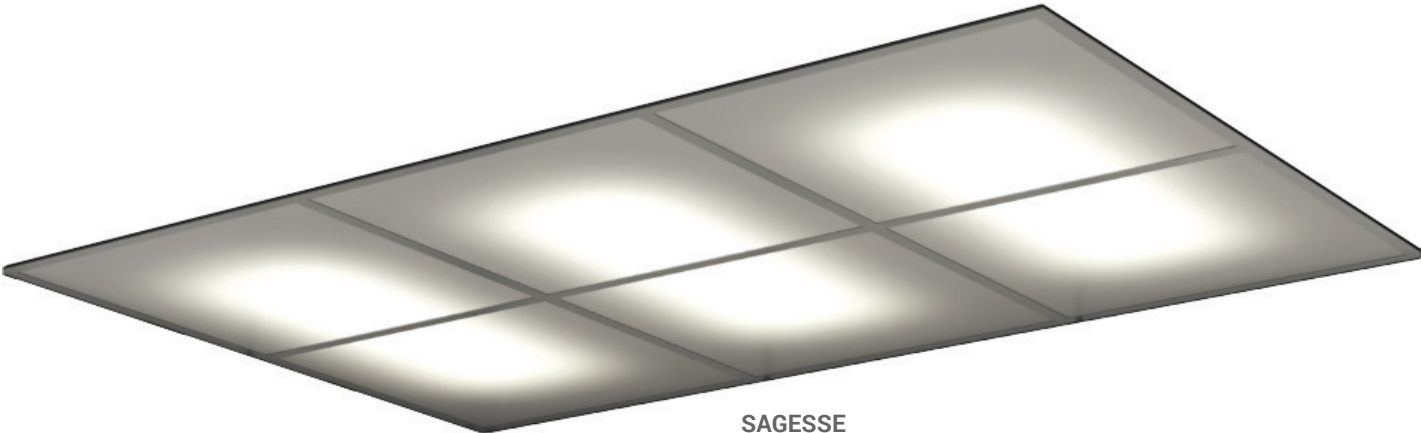

SAGESSE

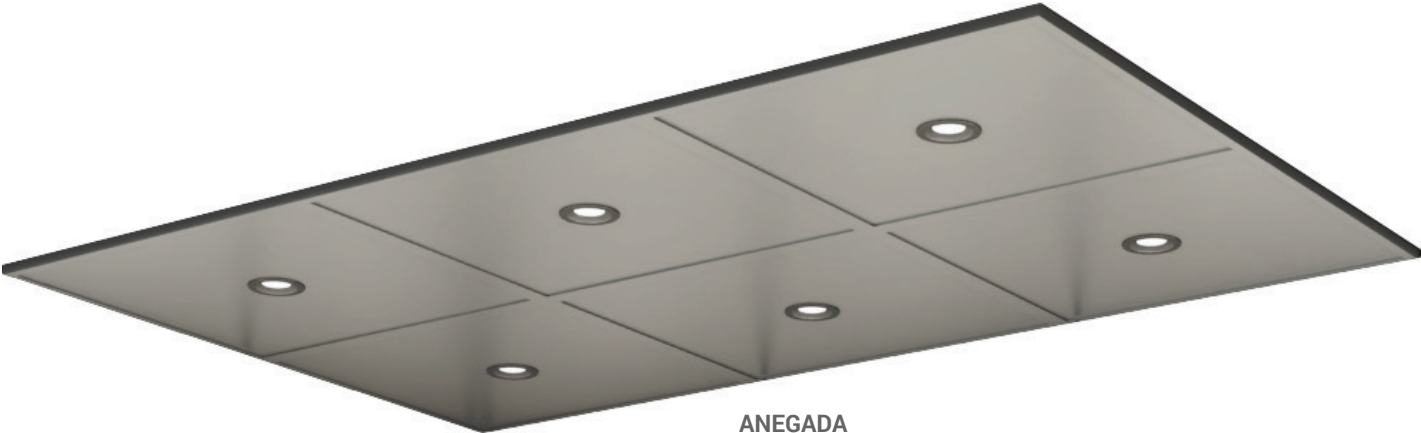

ANEGADA



INSTALLATION INSTRUCTIONS:  
T-FRAME CEILING

# CONTENT

**TIP:** Ensure you have all the required tools before installing.


Please follow Personal Protective Gear requirements for your region.



## NEED MORE HELP?

WATCH A VIDEO TUTORIAL:

1. Open the Camera app.
2. Scan Q.R. Code.
3. Select the link.

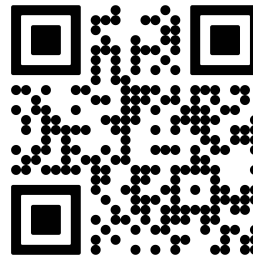

**24 HOUR TECHNICAL HOTLINE: 800.800.4960**

Our staff is always ready to answer any questions, night or day.

**SPECIAL NOTES:**

---

---

---

---

---

---

---

---

---


---

# INSTALLATION INSTRUCTION

## T-FRAME CEILING

**TIP:** Watch a video tutorial of installing ceiling or call our 24 Hour Technical Hotline.

1.1 Review 'customer drawings' and 'packing list'.

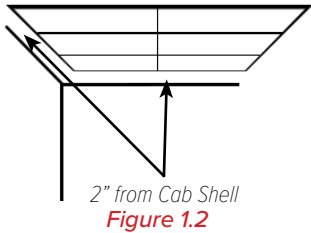

1.2 If you have purchased a Fabacab interior, the standard perimeter gap from each edge of the ceiling to the cab shell is 2" as shown in Figure 1.2.

1.3 To layout your anchor, measure 3 3/4" from the sides & back wall. This will define your intersection line from which you can now pull chalk lines for the brackets, which must be placed at least 2 inches from the corner.

**TIP:** We recommend to use a chalkline to create a centerline.

1.4. Remove ceiling from the crating carefully.

1.5 If lights were ordered, assemble and install them only after Step 1.8.

**TIP:** All brackets provided must be used to ensure proper installation.

1.6 Mark the ceiling frame where each bracket will be attached as per chart and Figure 1.6A & 1.6B. The brackets should be equally spaced around the perimeter and across the center of ceiling.


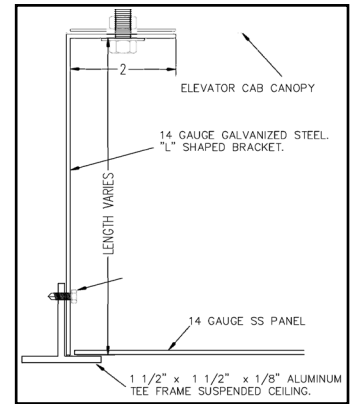


Figure 1.6A

Ceiling Size	Number of Brackets	Brackets Distribution		
		Corners	Center	Longer Side
0 - 15sq ft	8	4	2	2
15 - 32sq ft	8	4	2	2
32 - 50sq ft	10	4	4	2
50 - 60sq ft	10	4	4	2

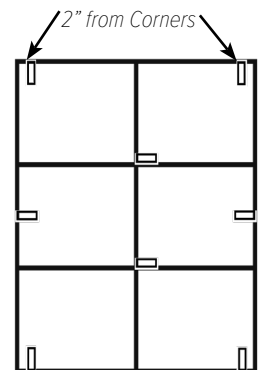

Typical Bracket Placement

Figure 1.6B

1.8 Use the provided step-bit, mark your holes and drill through the canopy.

1.9 If lighting is included, mount the power supply to the top side of canopy & the lights in drop panels.

**TIP:** If Fabacab interior is being installed, do not install the ceiling drop-in panels until all wall panels are fastened to the cab shell to access the top panel brackets.

1.10 Raise ceiling & so that the bolt passes through the canopy. Install washers & nuts and then tighten.

1.11 Install the drop in panels into the ceiling frame and connect each light to the power supply. Reference the Man-D-Tec installation instructions provided in the lighting kit.

