
# ISLAND CEILING

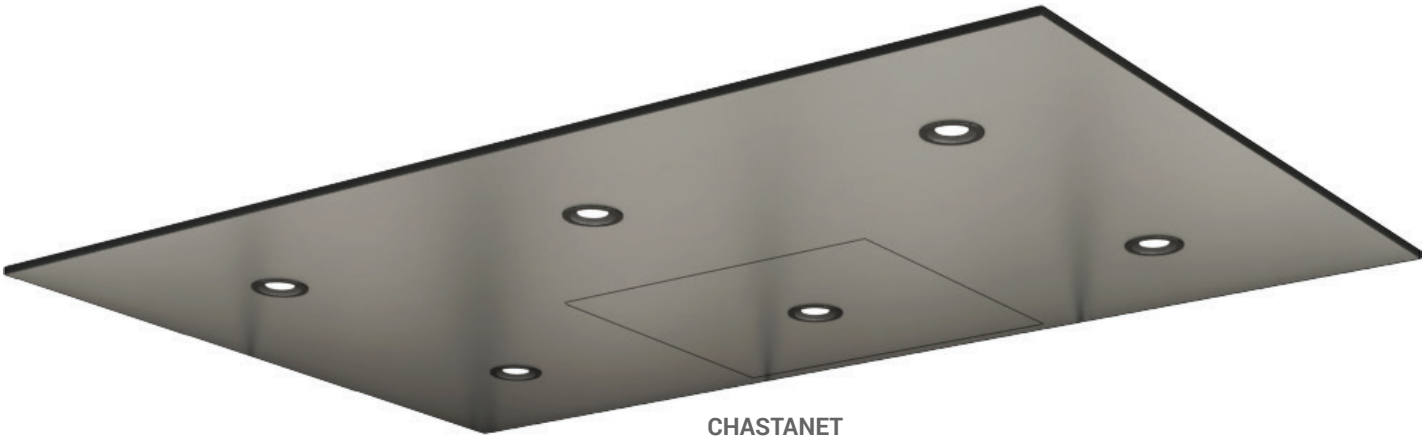

CHASTANET



MANZANILLA

## INSTALLATION INSTRUCTIONS:
## ISLAND CEILING

# CONTENT

***TIP:*** **Ensure you have all the required tools before installing.**
**Please follow Personal Protective Gear requirements for your region.**




# NEED MORE HELP?

## WATCH VIDEO TUTORIALS:

1. Open the Camera app.
2. Scan Q.R. Code.
3. Select the link.
4. Select Island Ceiling Video.

## 24 HOUR TECHNICAL HOTLINE: 800.800.4960

Our staff is always ready to answer any questions, night or day.


## SPECIAL NOTES:

INSTALLATION INSTRUCTION

# ISLAND CEILING

***TIP:*** **Watch a video tutorial of installing ceiling or call our 24 Hour Technical Hotline.**

1.1 Review 'customer drawings' and 'packing list'.

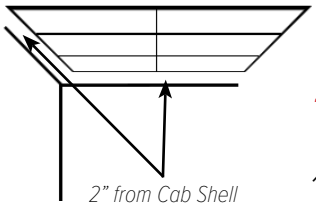

*2" from Cab Shell*
*Figure 1.2*

1.2 If you have purchased a Fabacab interior, the standard perimeter gap from each edge of the ceiling to the cab shell is 2" as shown in Figure 1.2.

***TIP:*** **We recommend to use a chalkline to create a centerline.**

1.3 Measure 3 ¾" from cab shell from the side & back wall. This will define the center line of the hatch channel for mounting brackets. The brackets must be placed atleast 2 inches from the corner.

***TIP:*** **Your brackets will come pre-assembled, however should it be separated during shipment, assemble them as shown in Figure 1.6A.**

1.4. Remove ceiling from the crating carefully.

1.5 If lights were ordered, lights must be installed and plugged in before lifting the ceiling.


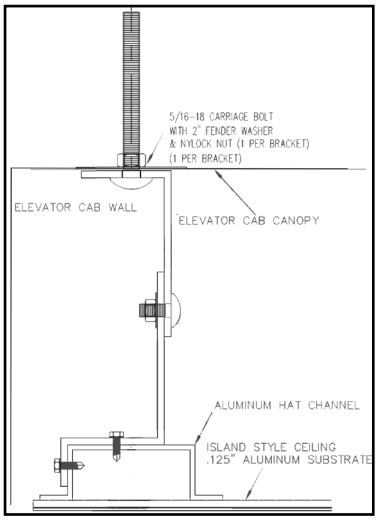



*Figure 1.6A*

***TIP:*** **All brackets provided must be used to ensure proper installation.**

1.6 Mark the ceiling frame where each brackets will be attached as per chart and Figure 1.6A & 1.6B. The brackets should be equally spaced around the perimeter and across the center of ceiling.

| Ceiling Size | Number of Brackets | Brackets Distribution | | |
|---|---|---|---|---|
| | | Corners | Center | Longer Side |
| 0 - 15sq ft | 8 | 4 | 2 | 2 |
| 15 - 32sq ft | 8 | 4 | 2 | 2 |
| 32 - 50sq ft | 10 | 4 | 4 | 2 |
| 50 - 60sq ft | 10 | 4 | 4 | 2 |

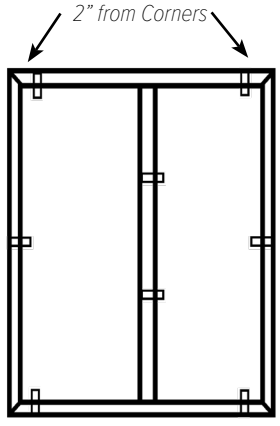


*Typical Bracket Placement*
*Figure 1.6B*

1.7 Use the provided step-bit, mark your holes and drill through the canopy.

1.8 Then, using your ceiling lift, raise ceiling & so that the bolt passes through the canopy. Install washers and nuts and then tighten.

1.9 Reference the Man-D-Tec installation instructions provided in the lighting kit.